

We say
Yes
to getting
the job
done right



Make your timber
edges look **neat** and tidy



SCAN TO
DOWNLOAD



DECOR

Find your local store using
our Store Locator at

www.buildit.co.za

Free

27

Build it

Yes We Can!

Applying pregglued

Edging



B


APPLYING PREGLUED EDGING

Edge banding is commonly used in home decorating. It is intended to help the user change the style and look of the grain in the wood. Eg. A plywood table can be changed to look like maple with the use of veneers and edge banding.

This leaflet details the application of edge banding


TOOLS REQUIRED

- Scissors
- Iron
- Roller / block of wood
- Edge trimmer
- Utility knife

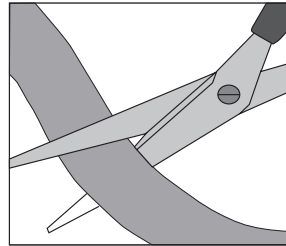


PREPARE SURFACE EDGE

- Fill any large holes
- Sand rough spots
- Remove sawdust
- Cut edging 1.5cm longer than surface to be covered

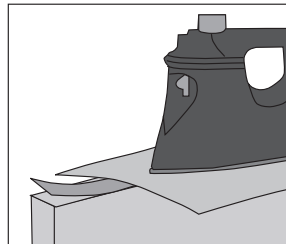


APPLY EDGING

- Preheat iron on "cotton" setting
- Position edging
- Slowly press iron over length of edging
- Check to see if glue is melting.
NOTE: Use utility craft paper or aluminum foil to protect iron bottom

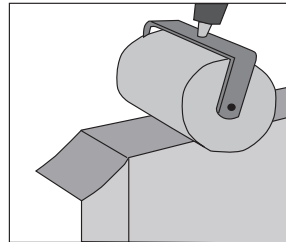

BONDING

- While still hot, press edging down firmly with wood block or roller.
- If mistakes should occur, simply reheat and reapply.

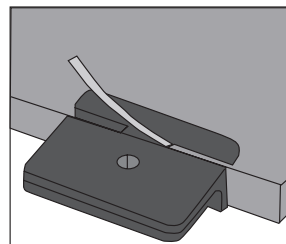

TRIM EDGE

- Allow edging to cool completely
- Trim excess with an edge trimmer or utility knife
- Sand wood veneer smooth and finish as desired.

Find your local store using
our Store Locator at www.buildit.co.za

Build it
Yes We Can!